




Figure

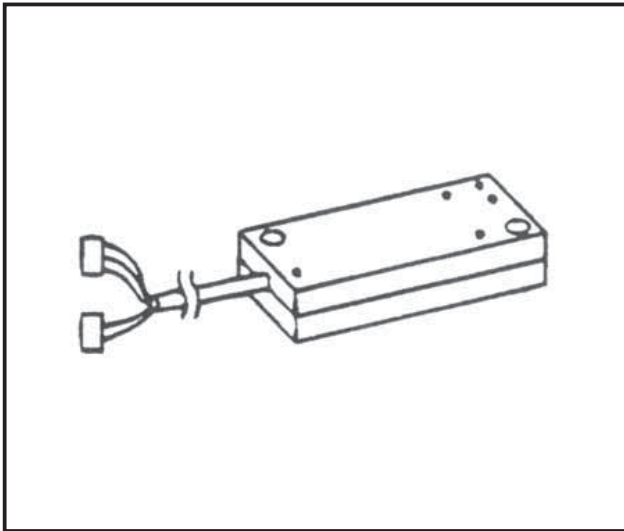

Descriptions

Extraction of non-voltage contact output.

*Use of optional [Remote Operation Adapter] and "remote display panel" Part to be provided at your site) provides non-voltage contact outputs of signals (operation,error) and operation/stop input function.

Applicable Models

- SLZ-KA VA
- SEZ-KD VA
- PLA-RP BA(2)(3)
- PEAD-RP JA(L)
- PEA-RP200/250GA
- PCA-RP KA/HA
- PSA-RP GA



Specifications

Power	Supplied from indoor unit	
External dimensions (mm)	160 x 70 x 30	
Exterior	Material: ABS resin, Color: Gray (Munsell 3.07Y 6.16/0.33)	
Weight	200g	
Operating conditions	Indoor only Temperature: 0 to 40°C, Humidity: 35 to 85%RH (no condensation)	
Connecting cable (indoor unit)	5-wire (3 + 2) cable with connector (9-pin, 4-pin)	
Output signal	No-voltage "a" contact (relay contact method)	
	Number of Contacts	2 (Operation / Alarm)
	Contact capacity	200V AC (30V DC)/1A or less
	Minimum load	10mA
Input signal	Pulse signal (instantaneous non-voltage "a" contact), pulse width: 200ms or more	
	Number of Contacts	1 (start/stop)
Input/output signal cable (locally prepared)	Type	CV, CVS, or equivalent sheathed vinyl cord/cable
	Diameter	Twisted: 0.5 to 1.25mm ² , Single: Φ0.65 to Φ1.2mm
	Distance	Output signal cable: Max. 100m Input signal cable: Max. 10m (Extension relay must be used when exceeding 10m)

* This kit cannot be used with a wireless remote controller.
Water leakage alarm will not be displayed if the unit is built into the ceiling (PDH)

Dimensions

 Unit : mm

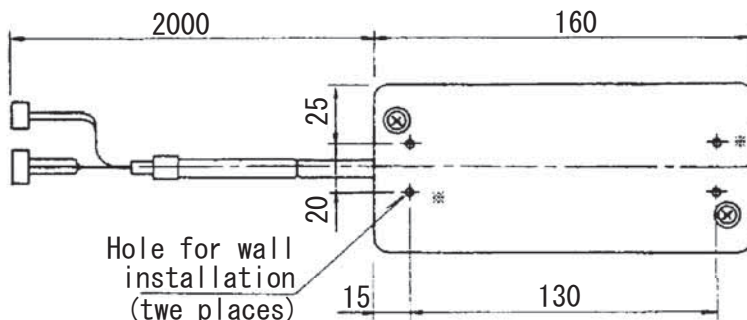





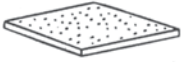




OPTIONAL PARTS

How to Use / How to Install

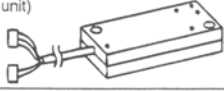1 Confirming the Supplied Parts

(1) Parts Provided

Check that the box includes the following parts in addition to this installation manual.


Parts	① Remote operation adaptor unit	② Cord clamp	③ Wall mount bracket
Shape	(with 2 meter wire for connecting with indoor unit) 	(Use this clamp if the local wiring is too thick to be held by the clamp inside the main unit.) 	
Quantity	1	1	1
Parts	④ Screws for mounting ③	⑤ Cushion material	⑥ Tie-wrap
Shape	 3.5 x 12 (Black)	(With adhesive on both sides.) 	(Use this for bundling lead wires.) 
Quantity	4	1	5
Parts	⑦ Cord clamp	⑧ Screws for mounting ⑦	⑨ Screws for mounting main unit
Shape		 3.5 x 12 (Black)	 3.5 x 12 (Black)
Quantity	5	5	2

(2) Locally Procured Parts

Note : Please keep LVD. LVD;Low Voltage Directive (EC Directive of Europe)
Apply some countermeasure for wiring and relay not to be touched from outside.
① Wiring should be covered by the insulation tube. ② Use relay with EU regulation.


Item	Part Name	Model & Specifications
External output function	External signal output wire	Use a vinyl cord with sheath or cable Electric wire type: CV, CVS or equivalent Electric wire size: 0.5 mm ² to 1.25 mm ² Single wire: ϕ 0.65 mm to ϕ 1.2 mm
	Display lamp, etc.	No-voltage contact AC 220 to 240 V (DC30V), 1A or less
External input function	External signal input wire	Use a vinyl cord with sheath or cable Electric wire type: CV, CVS or equivalent Electric wire size: 0.5 mm ² To 1.25 mm ² (Single wire: ϕ 0.65 mm to ϕ 1.2 mm)
	Switch	No-voltage momentary contact (Operation \leftrightarrow Stop is switched by input of a pulse of 200 ms or more)

2 External Dimension Drawing

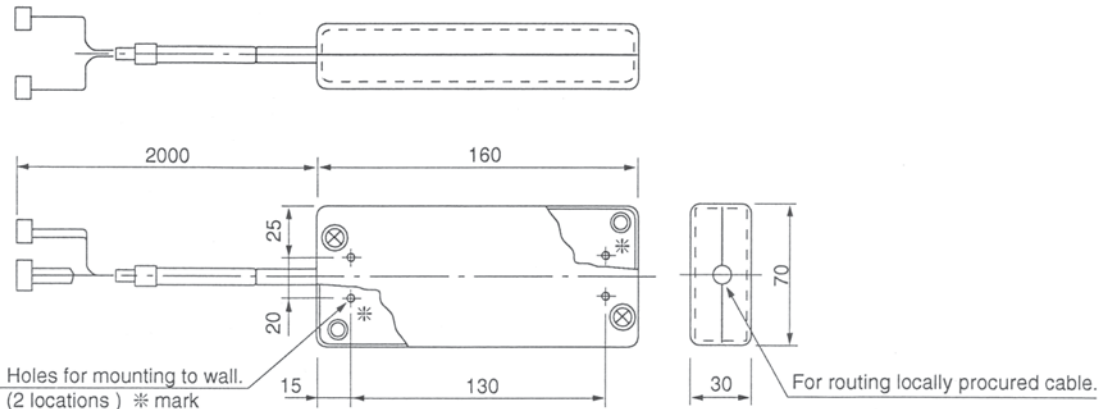

OPTIONAL PARTS

3 Wiring

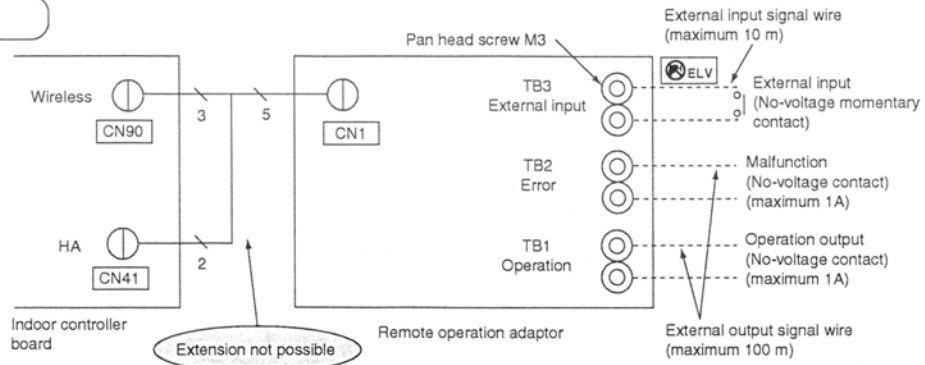

⚠Caution

- 1) TB3 is a dedicated terminal for contact input. Do not apply voltage. Applying voltage will cause damage to the circuit board inside the for the indoor unit controller.
- 2) Always use the cable provided for connecting the unit to the indoor unit. Never make modifications to extend this cable. Extensions could cause the cable to be affected by external noise which could lead to mis-operation. If an extension is needed, refer to specification chart in "6. Product Specifications" a follow it when extending the external signal wire.

<Connecting to the indoor unit>


- ① If external output functions are used Insert the 9-electrode (3 core) side of the cable provided into CN90 on the controller circuit board for the indoor unit.
- ② If external input functions are used Insert the 4-electrode (2 core) side of the cable provided into CN41 on the controller circuit board for the indoor unit.

* The connector can only be inserted in one direction. Be sure to check that the connector is in the proper direction before inserting. Forcing the connector will cause damage.


4 How to Install

There are three ways to mount the remote operation adaptor main unit: [A] Using mounting bracket, [B] Mounting directly, and [C] Using the cushion material.

(1) Installation Example (Suspended Type)

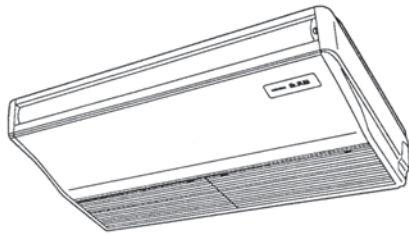



[A] Mounting to wall mounting bracket

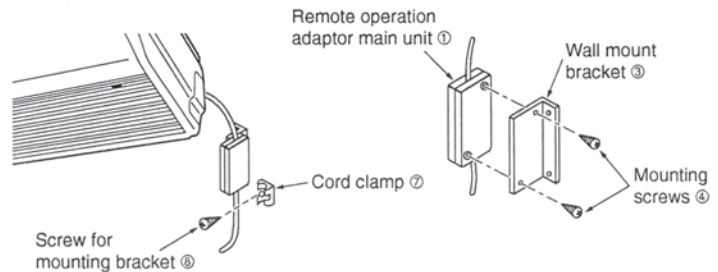


⚠Caution

- 1) When mounting the remote operation adaptor main unit, be sure to use the mounting hardware to mount it to a wall or beam so that an inspection port is available for servicing.
- 2) If there is any loose remaining wire after installation, use a tie-wrap ⑥ to bundle it.

[B] Mounting directly to wall

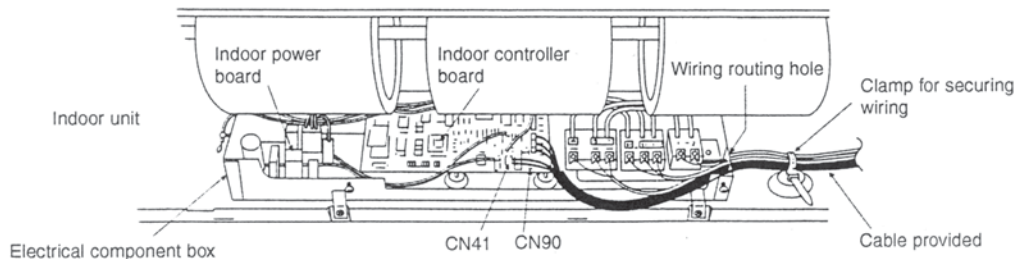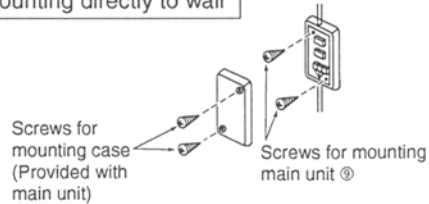

(2) Installation Example 2 [Cassette Type]

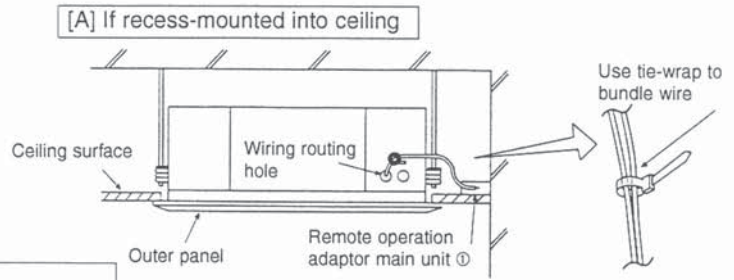

⚠Caution

- 1) When mounting the remote operation adaptor main unit, be sure to use the mounting hardware to mount it to a wall or beam so that an inspection port is available for servicing.
- 2) If there is any loose remaining wire after installation, use a tie-wrap ① to bundle it.